
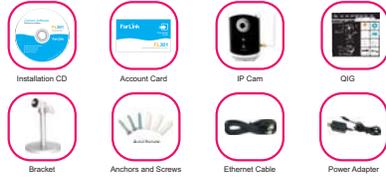


Seeing the video from anywhere

Quick Installation Guide


Day & Night Farlink IP Camera

Package and Product View

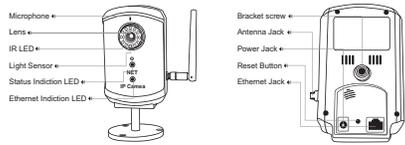

1 Farlink IP Camera Installation

- 1 Make sure you correctly plug in the power adapter and the Ethernet cable. Farlink IP Camera will get the IP address from the NAT/Router automatically. The diagram above shows you how to connect the devices correctly.
- 2 Check the status indication LED of Farlink IP Camera to see if Farlink IP Camera is correctly connected. Constant red light means that IP Camera is working fine. Then, you can move forward to install the FarlinkView (video management software). Otherwise, go back to 1 and check it again carefully. If the status indication LED is still blinking, contact your retailer then.

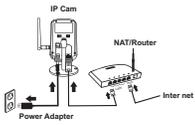

2 FarlinkView Software Installation



- 1 Before installing FarlinkView on your PC or laptop, please make sure you have correctly installed the Farlink IP Camera. It's highly recommended to close other Windows applications to prevent the installation from any possible conflict.
 - 2 Insert the installation CD into your CD-ROM drive and find the FarlinkView\install-xxx.exe. Double click on it and press "Next" button till the end of the installation.
- Note: xxx of FarlinkView Installer -xxx.exe is the version number.
- The right page, Installation Successful, should be displayed if everything is correct. If not, re-install it again. Contact your retailer if it is not working.



3 FarlinkView Software Usage

- 1 Start the FarlinkView application from either Start->Programs->FarlinkView->FarlinkView or the shortcut on the desktop of the Microsoft windows.
 - 2 Once the FarlinkView started, it will search all the Farlink IP Camera in your Local Area Network automatically and shows the Camera ID of each of the found IP Camera in the tree menu 'Auto Search' folder of the 'Cam List' page.
- Note: To save the found Cam ID on your PC, simply drag it from 'Auto Search' folder to 'CameraList'. By doing so, you can easily play the video without memorizing the Cam ID.
- 3 To view the video, simply double-click on the Cam ID which you want to see or drag the Cam ID to one of the video play windows.
- Note: If the Cam you want to see is outside of your LAN and the Camera ID is not stored in the 'CameraList'. Please right-click on the 'CameraList' choose 'NewCamera' and enter the Camera ID and password.
- Notes: For further operation, please refer to the full-version user manual of FarlinkView.



4 Wireless Setting of Farlink IP Camera

- 1 Please make sure the Ethernet cable is connected to the Farlink IP Camera.
- 2 Start the FarlinkView. In the 'Auto Search' folder, right-click on the Cam ID of the IP Camera that you want to configure. Click the 'Web Configure ...' to open the browser.
- 3 Key in the admin account and password, respectively, to enter the web page of Farlink IP Camera.
- 4 Click 'WiFi Security' in the menu items to see the current settings of the WiFi.
- 5 Enable the WiFi function, enter the SSID of your wireless AP, choose the security mode and enter the encryption key according to the settings of your wireless AP.
- 6 Click 'Save & Apply' to save the configuration.
- 7 You can check the settings to see if they are correct, go to 'WiFi security' page and click the 'WiFi test' button in bottom right corner. Wait for about 15 seconds, the result will be displayed. If it's failed, please double check the settings you have entered.
- 8 Now you are ready to activate the wireless connection by plugging off the Ethernet cable from the Farlink IP Camera.



5 Night mode control

- There are three ways to control the night mode (IR LEDs) (On the web page of the IP Cam):
- 1 Automatic day and night mode switch: the Farlink IP camera automatically turns on/off the IR LEDs according to the status of the built-in light sensor.
 - 2 Scheduled time of night mode: the Farlink IP Camera can also be scheduled to turn on/off the IR LEDs.
 - 3 Manual night mode control: the Farlink IP Camera can be manually forced to night mode (IR LEDs on) or day mode (IR LEDs off).

Warning

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Compliance Statement:

This equipment has been tested and found to comply with limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Move the equipment away from the receiver.
- Plug the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for additional suggestions.
- You are cautioned that any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void the authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


- 1) this device may not cause harmful interference and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

Seeing the video from anywhere

Quick Installation Guide


Farlink Pan/ Tilt IP Camera

Package and Product View

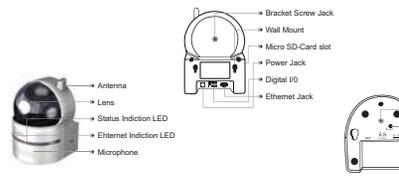

1 Farlink IP Camera Installation

- 1 Make sure you correctly plug in the power adapter and the Ethernet cable. Farlink IP Camera will get the IP address from the NAT/Router automatically. The diagram above shows you how to connect the devices correctly.
- 2 Check the status indication LED of Farlink IP Camera to see if Farlink IP Camera is correctly connected. Constant red light means that IP Camera is working fine. Then, you can move forward to install the FarlinkView (video management software). Otherwise, go back to 1 and check it again carefully. If the status indication LED is still blinking, contact your retailer then.

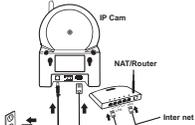

2 FarlinkView Software Installation



- 1 Before installing FarlinkView on your PC or laptop, please make sure you have correctly installed the Farlink IP Camera. It's highly recommended to close other Windows applications to prevent the installation from any possible conflict.
 - 2 Insert the installation CD into your CD-ROM drive and find the FarlinkView\install-xxx.exe. Double click on it and press "Next" button till the end of the installation.
- Note: xxx of FarlinkView Installer -xxx.exe is the version number.
- The right page, Installation Successful, should be displayed if everything is correct. If not, re-install it again. Contact your retailer if it is not working.



3 FarlinkView Software Usage

- 1 Start the FarlinkView application from either Start->Programs->FarlinkView->FarlinkView or the shortcut on the desktop of the Microsoft windows.
 - 2 Once the FarlinkView started, it will search all the Farlink IP Camera in your Local Area Network automatically and shows the Camera ID of each of the found IP Camera in the tree menu 'Auto Search' folder of the 'Cam List' page.
- Note: To save the found Cam ID on your PC, simply drag it from 'Auto Search' folder to 'CameraList'. By doing so, you can easily play the video without memorizing the Cam ID.
- 3 To view the video, simply double-click on the Cam ID which you want to see or drag the Cam ID to one of the video play windows.
- Note: If the Cam you want to see is outside of your LAN and the Camera ID is not stored in the 'CameraList'. Please right-click on the 'CameraList' choose 'NewCamera' and enter the Camera ID and password.
- Notes: For further operation, please refer to the full-version user manual of FarlinkView.



4 Wireless Setting of Farlink IP Camera

- 1 Please make sure the Ethernet cable is connected to the Farlink IP Camera.
- 2 Start the FarlinkView. In the 'Auto Search' folder, right-click on the Cam ID of the IP Camera that you want to configure. Click the 'Web Configure ...' to open the browser.
- 3 Key in the admin account and password, respectively, to enter the web page of Farlink IP Camera.
- 4 Click 'WiFi Security' in the menu items to see the current settings of the WiFi.
- 5 Enable the WiFi function, enter the SSID of your wireless AP, choose the security mode and enter the encryption key according to the settings of your wireless AP.
- 6 Click 'Save & Apply' to save the configuration.
- 7 You can check the settings to see if they are correct, go to 'WiFi security' page and click the 'WiFi test' button in bottom right corner. Wait for about 15 seconds, the result will be displayed. If it's failed, please double check the settings you have entered.
- 8 Now you are ready to activate the wireless connection by plugging off the Ethernet cable from the Farlink IP Camera.



Warning

This device complies with part 15 of FCC Rules. Operation is Subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Compliance Statement:

This equipment has been tested and found to comply with limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Move the equipment away from the receiver.
- Plug the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for additional suggestions.
- You are cautioned that any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void Your authority to operate such equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference and
- 2) this device must accept any interference received, including interference that may cause undesired operation.