


iPhone mCamview - Lite:

Thank you for using mCamview.

[Add new camera:]

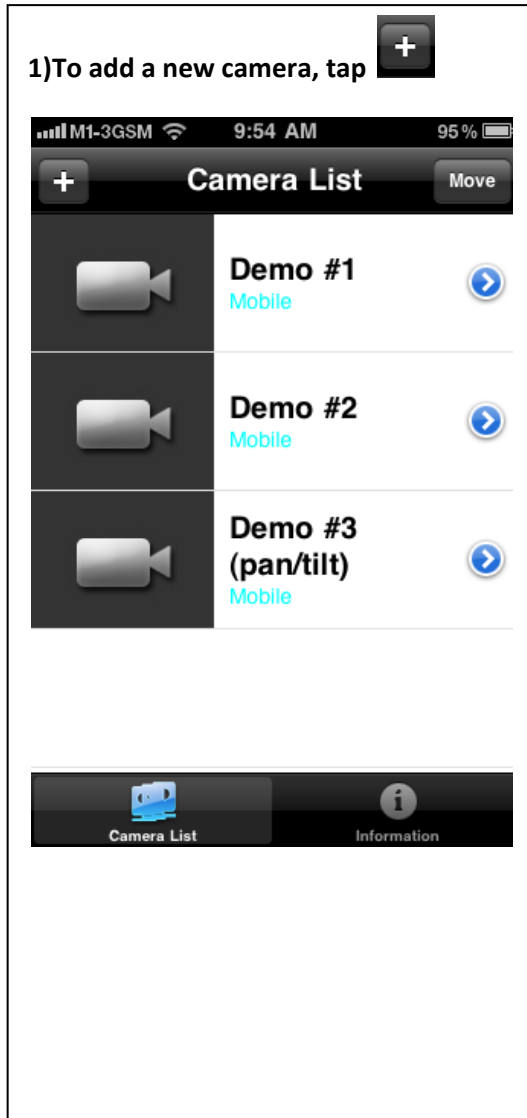

2) Key in the required data in the specific fields.


Name: [give the camera a name,

eg: home]

ID: 9-digit Camera ID



Password: the video password

3) Click  to register the camera.

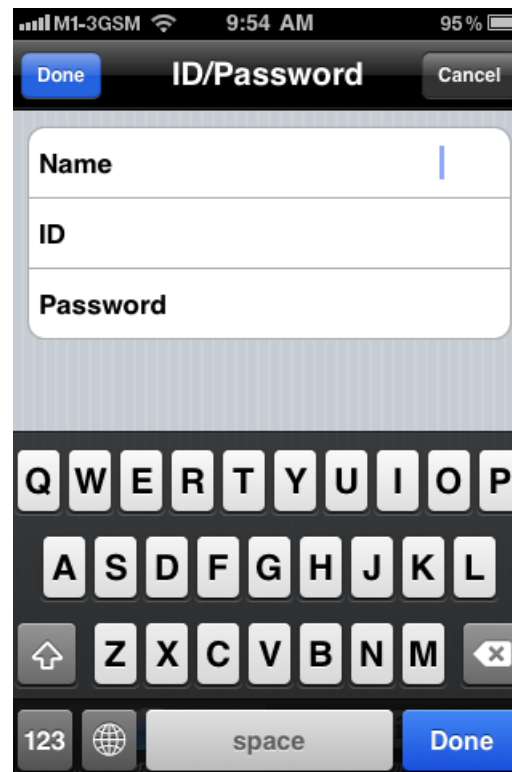

[Mobile Configuration:]

Functions: To Change Name, Password, ID, Resolution, **Audio on/off**, Video Quality, Video Control

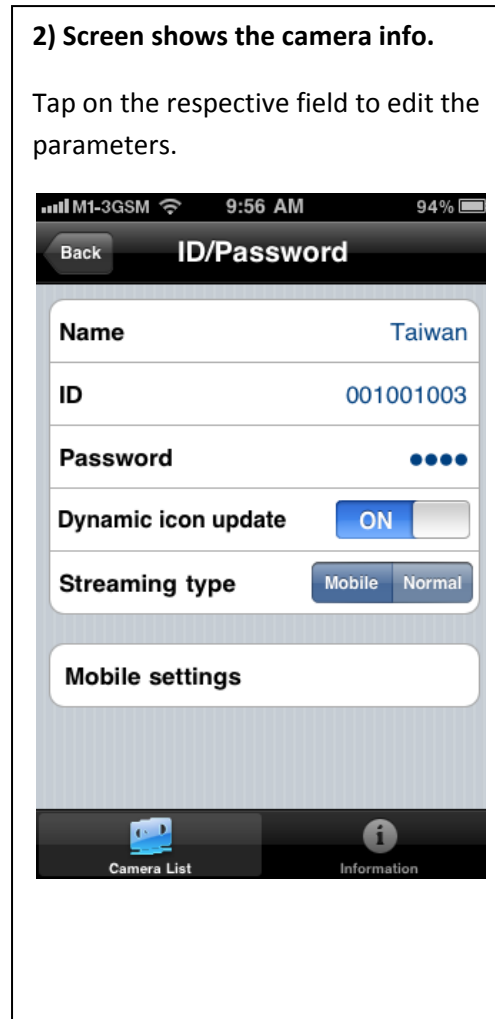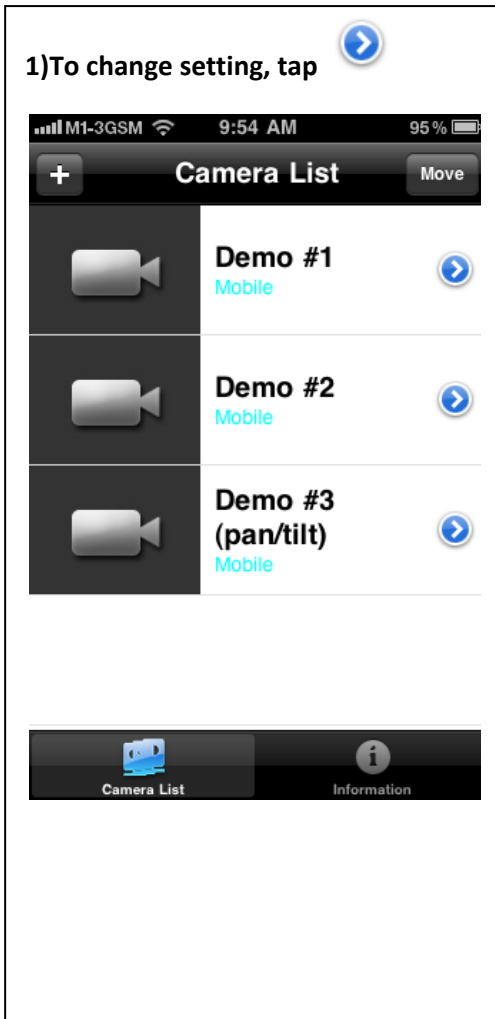


3) Streaming type:

[Audio & Resolution]


By default, it is set to **Mobile** with 320x240 resolution & Audio disabled.

Tap **Normal** for 640 x 480 resolution & Audio

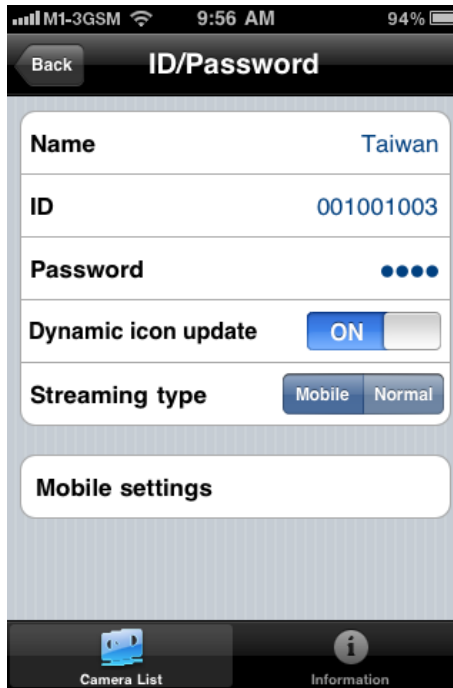

4) Video setting:

Tap [Video Setting] to expand the screen.

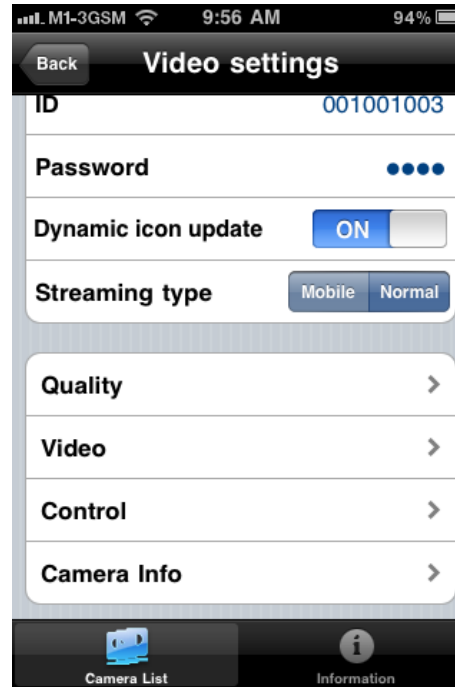


4a) Video setting: Quality

Bandwidth: By default the Bandwidth is set to 512Kbps. You may change it according to your network requirement.

Auto: Set it to 'On' to auto configure the best frame rate & resolution.

Preference: You can select either Image or Video motion quality

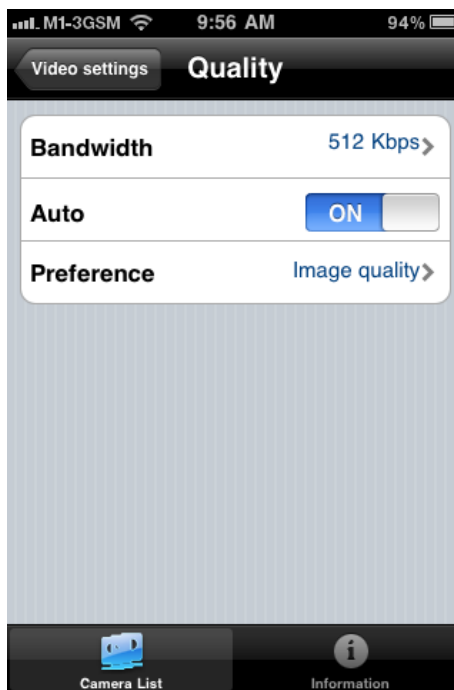


4b) Video setting: Video

You may change the setting according to your requirement.

Microphone: Enable or disable the audio

Video flip: Flip the video if the camera is installed in inverted position.

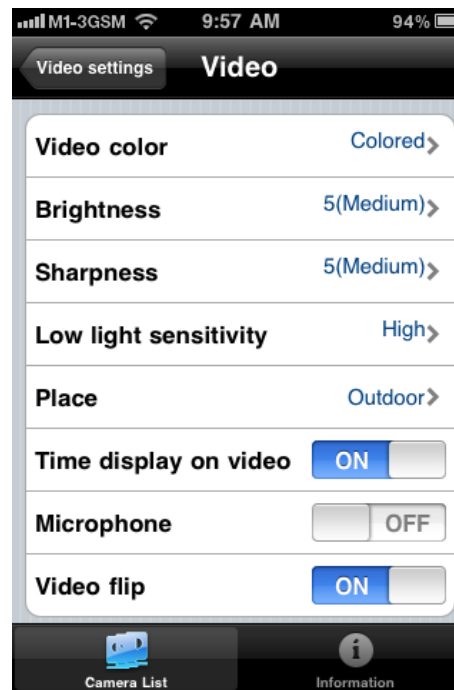


4c) Video setting: Control

Pan/Tilt Control: For FL501 Only

Status LED: You may set the 2 LEDs on the camera to Off on specific condition.

Motion Sensitivity: For Motion detection use. 1 = High Sensitivity, 10 = Low Sensitivity. Default: 5

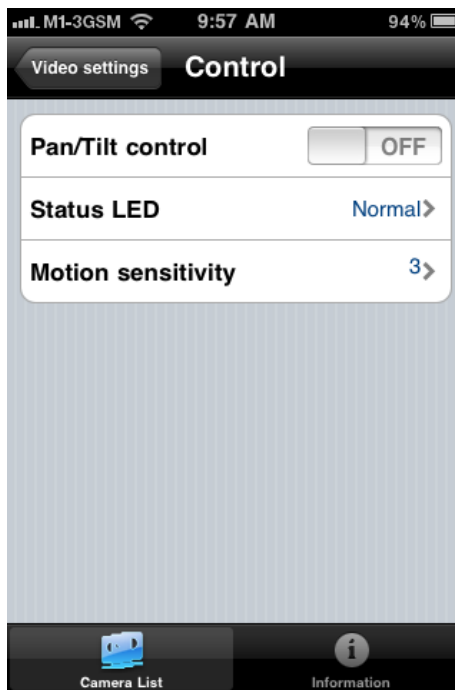

4d) Video setting: Camera Info

This is the camera information page.



5) Saving the parameters

If parameter(s) has been changed, tap update to save the parameter(s).

Authentication is required.

Username: admin

Password: this is the admin password. By default, it is empty, no password. If you have changed it in the **web config – Admin –Password**, please enter this password accordingly.

